

Insulated Tote Heaters up to 2880 Watts

- ✓ Designed for caged, plastic, or metal tote tanks / IBCs
- ✓ Wrap-around blanket design allows you to heat a tote tank / IBC in a non-invasive way
- ✓ Does not contaminate or scorch your product
- ✓ Two separate heat zones allow you to adjust heater output when content levels lower
- ✓ **CE** 73/23/EEC. See page A-1 for more information.

Configure-To-Order Option



Other Sizes, Shapes, Power

Temperatures up to



160°F (71°C)*

* Maximum content temperature may vary based on application (tote tank size, contents, etc).

Call Power Plant Supply Co for details 902 435 9899 - 416 752 3339 – 709 747 7650



Heats caged and metals IBCs



Plastic tote tanks.

The Features You Need:

Adjustable thermostats



Protects contents and tote tank surface from heat damage with manual reset high-limit safety thermostats.



Fits several tote tank sizes with adjustable nylon straps and buckles.

Standard plug

Canada Distributor Power Plant Supply Co Ph # 902 435 9899 416 752 3339

<http://www.powercanadaprotect.com/toteheaters.html>

Specifications

- Full coverage plug-and-play system
- Fits any tote tank width from 40" x 40" (1016mm x 1016mm) to 48" x 48" (1219mm x 1219mm)
- Three standard height sizes: 36" (914mm), 42" (1067mm), 48" (1220mm)
- Two separate heat zones (top and bottom)
- Adjustable thermostat: 50-160°F (10-71°C)*
- Built-in manual reset high-limit safety thermostat set at 195°F (91°C) for each heat zone
- Attachment method: adjustable nylon straps with buckles (Two across the top and three around the tank)
- Silicone impregnated cloth facing and liner
- "Mouse hole" designed for spigot
- Patented ground for your safety
- 120 / 240VAC
- Total wattage: 120VAC = 1440 watts
240VAC = 2880 watts
- Power cord 6 feet (1.8M) long with standard 3-prong power plug:
120VAC = NEMA 5-15
240VAC = NEMA 6-15
- Optional insulated top cover accelerates heat-up

How to Measure Your Tote Tank / IBC:



1. Measure the height of the tote tank / IBC **not including the pallet or support stand.**

Height


2. Measure the length and width of the tank. This determines the tank perimeter for the heated area.

$$\begin{matrix} & \times 2 & + & & \times 2 & = & \\ \text{Tank Length} & & & \text{Tank Width} & & & \text{Tank Perimeter} \end{matrix}$$

Note: If tank perimeter measurement is below 160" (4064mm) or above 192" (4877mm), call Power Plant Supply Co

Power Plant Supply Co has convenient shipping warehouse locations in Canada, to serve customers in Ontario, ON, Quebec, QC, Atlantic Canada, including New Brunswick, NB, PEI, Nova Scotia, NS, Newfoundland & Labrador, NL, British Columbia, BC, Alberta, AB, Manitoba, Man, Saskatchewan, SK, Nunavut, Northwest Territories, NWT, Yukon. Next day Air or convenient ground to major cities including Vancouver, Calgary, Edmonton, Fort McMurray, Winnipeg, Yellowknife, Thunder Bay, Hamilton, Toronto, Ottawa, Montreal, Quebec City, Saint John, Moncton, Fredericton, Charlottetown, Halifax, Sydney, Corner Brook, St John's.

Height in (mm)	Tank Perimeter Minimum	Tank Perimeter Maximum	Total Wattage 120V / 240V	Weight lb (kg)	Part Number 120VAC	Part Number 240VAC
36" (914)	160" (4064)	192" (4877mm)	1440 / 2880	34 (15)	TOTE361-ADJ	TOTE362-ADJ
42" (1067)	160" (4064)	192" (4877mm)	1440 / 2880	40 (18)	TOTE421-ADJ	TOTE422-ADJ
48" (1220)	160" (4064)	192" (4877mm)	1440 / 2880	46 (21)	TOTE481-ADJ	TOTE482-ADJ

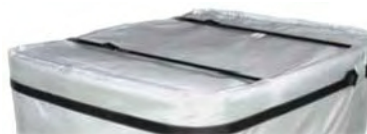

Insulated top cover minimizes heat loss